

GMH 5430 MANUAL

JUNHO 2013




Tel: (+351) 21 843 64 00
Fax: (+351) 21 843 64 09
geral@bhb.pt www.bhb.pt

Operating manual
Conductivity measuring device
water-proof, with data logger

as of version 1.8

GMH 5430



-  Please carefully read these instructions before use!
-  Please consider the safety instructions!
-  Please keep for future reference!



WEEE-Reg.-Nr. DE 93889386

GREISINGER electronic GmbH
D - 93128 Regensburg, Hans-Sachs-Straße 26

Index

1	GENERAL NOTE.....	3
2	SAFETY	3
2.1	INTENDED USE.....	3
2.2	SAFETY SIGNS AND SYMBOLS.....	3
2.3	SAFETY GUIDELINES	3
3	PRODUCT SPECIFICATION.....	4
3.1	SCOPE OF SUPPLY	4
3.2	OPERATION AND MAINTENANCE ADVICE	4
4	HANDLING	5
4.1	DISPLAY ELEMENTS.....	5
4.2	PUSHBUTTONS.....	5
4.3	CONNECTIONS	6
4.4	POP-UP CLIP	6
5	START OPERATION.....	7
6	PRINCIPLES OF THE MEASUREMENTS	7
6.1	BASICS ABOUT CONDUCTIVITY	7
6.2	MEASURING RANGES AND CELL CONSTANTS	7
6.3	CONDUCTIVITY MEASUREMENT	7
6.4	RESISTIVITY MEASUREMENT	8
6.5	TDS MEASUREMENT.....	8
6.6	SALINITY MEASUREMENT.....	8
6.7	ELECTRODES / MEASURING CELLS.....	9
6.7.1	Assignment bayonet-connector	9
6.7.2	Design and selection	9
6.8	TEMPERATURE COMPENSATION	9
6.8.1	Temperature compensation “nLF” according to EN 27888	9
6.8.2	Linear temperature compensation and determination of temperature coefficient “t.Lin“	9
7	CONFIGURATION	10
8	UNIVERSAL OUTPUT	12
8.1	INTERFACE.....	12
9	ADJUSTMENT OF TEMPERATURE INPUT.....	12
10	AUTOMATIC ADJUSTMENT/CALIBRATION OF CELL CONSTANT	13
11	GLP	13
11.1	CALIBRATION INTERVAL (C.INT).....	13
11.2	CALIBRATION STORAGE (READ CAL).....	14
12	ACCURACY CHECK / ADJUSTMENT SERVICE	14
13	REPLACING BATTERIES.....	14
14	ERROR AND SYSTEM MESSAGES	15
15	RESHIPMENT AND DISPOSAL	15
15.1	RESHIPMENT	15
15.2	DISPOSAL INSTRUCTIONS.....	16
16	SPECIFICATION.....	16

1 General Note

Read this document carefully and get used to the operation of the device before you use it. Keep this document within easy reach near the device for consulting in case of doubt.

Mounting, start-up, operating, maintenance and removing from operation must be done by qualified, specially trained staff that have carefully read and understood this manual before starting any work.

The manufacturer will assume no liability or warranty in case of usage for other purpose than the intended one, ignoring this manual, operating by unqualified staff as well as unauthorized modifications to the device. The manufacturer is not liable for any costs or damages incurred at the user or third parties because of the usage or application of this device, in particular in case of improper use of the device, misuse or malfunction of the connection or of the device.

The manufacturer is not liable for misprints.

2 Safety

2.1 Intended Use

The device is designed for measuring conductivity, resistivity, salinity and TDS – using external suitable electrodes (measuring cells). The electrodes are connected via 7-pole bayonet connection.

Please consider: Depending on the measuring range different electrode types may be needed – choose an appropriate one.

There is the possibility to connect a temperature sensor (Pt1000 or NTC 10k) to the 7-pole bayonet socket. Generally a suitable temperature sensor is included to the electrode. The measured temperature is used for the automatic temperature compensation (e.g. Lin or nIF) and is additionally displayed.

The safety requirements (see below) have to be observed.

The device must be used only according to its intended purpose and under suitable conditions.

Use the device carefully and according to its technical data (do not throw it, strike it, etc.)

Protect the device from dirt.

2.2 Safety signs and symbols

Warnings are labeled in this document with the followings signs:



Caution! This symbol warns of imminent danger, death, serious injuries and significant damage to property at non-observance.



Attention! This symbol warns of possible dangers or dangerous situations which can provoke damage to the device or environment at non-observance.







Note! This symbol point out processes which can indirectly influence operation or provoke unforeseen reactions at non-observance.

2.3 Safety guidelines

This device has been designed and tested in accordance with the safety regulations for electronic devices. However, its trouble-free operation and reliability cannot be guaranteed unless the standard safety measures and special safety advises given in this manual will be adhered to when using the device.

1. Trouble-free operation and reliability of the device can only be guaranteed if the device is not subjected to any other climatic conditions than those stated under "Specification".

If the device is transported from a cold to a warm environment condensation may cause in a failure of the function. In such a case make sure the device temperature has adjusted to the ambient temperature before trying a new start-up.

2.  **DANGER** If there is a risk whatsoever involved in running it, the device has to be switched off immediately and to be marked accordingly to avoid re-starting.
Operator safety may be a risk if:
- there is visible damage to the device
 - the device is not working as specified
 - the device has been stored under unsuitable conditions for a longer time.
- In case of doubt, please return device to manufacturer for repair or maintenance.
3. When connecting the device to other devices the connection has to be designed most thoroughly as internal connections in third-party devices (e.g. connection GND with protective earth) may lead to undesired voltage potentials that can lead to malfunctions or destroying of the GMH 5155 and the connected devices.
-  **DANGER** This device must not be run with a defective or damaged power supply unit.
Danger to life due to electrical shock!
4.  **DANGER** Do not use these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury or material damage.
Failure to comply with these instructions could result in death or serious injury and material damage.
5.  **DANGER** This device must not be used at potentially explosive areas! The usage of this device at potentially explosive areas increases danger of deflagration, explosion or fire due to sparking.

3 Product Specification

3.1 Scope of supply

The scope of supply includes:

- GMH 5430 with 2 AAA batteries
- Operating manual
- Short form manual

3.2 Operation and maintenance advice

1. Battery operation:

If 'bAt' is shown in the lower display the battery has been used up and needs to be replaced. However, the device will operate correctly for a certain time. If 'bAt' is shown in the upper display the voltage is too low to operate the device; the battery has been completely used up. Battery change: p.r.t. chapter **Fehler! erweisquelle konnte nicht gefunden werden.**



The battery has to be taken out, when storing device above 50°C. We recommend taking out battery if device is not used for a longer period of time.
After recommissioning the real-time clock has to be set again.

2. Treat device and sensor carefully. Use only in accordance with above specification. (do not throw, hit against etc.). Protect plug and socket from soiling.

3. USB or mains operation:

When connecting a mains cable or USB interface cable, please take care to connect only allowed components.




The output voltage of a connected power supply unit has to be between 4.5 and 5.5 V DC.
Don't apply overvoltage!

We recommend operation with interface cable USB 5100. Then device is supplied by the USB interface of the connected PC or USB power supply adapter.

4 Handling

4.1 Display elements

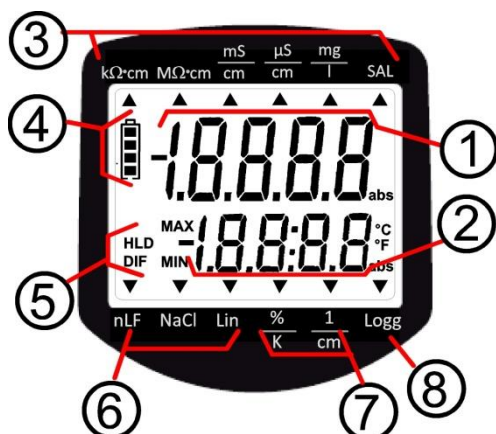

Main display: conductivity (mS/cm, µS/cm)
resistivity (kΩcm, MΩcm)
TDS / total dissolved solids (mg/l)
salinity (SAL)

1

2 **Secondary display:** measuring value temperature

3 Arrows to selected **measuring unit**

4 Rating of battery state


5 Display elements to show minimum / maximum / memorized measuring value

6 **nLF NaCl, Lin:** display element for selected **temperature compensation**

7 **%/K, 1/cm:** additional configuration units

8 *without function at this device type*

4.2 Pushbuttons

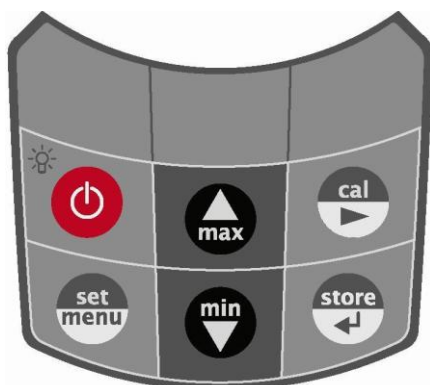

On / off key, backlight

press shortly: activate backlight or switch on instrument
press longer: switch off instrument



set / menu:

press shortly: manual temperature input (if no temperature probe is connected)
press for 2 sec. (menu): invoke configuration menu



min / max:

press shortly: min. or max. value is displayed
press for 2 sec: the corresponding value is deleted



cal: only at mode 'cond'=conductivity:

press for 2 sec: start cell constant adjustment



store / enter:

Measurement: hold and save current measuring value ('HLD' is displayed)

Set/Menu: confirm settings, return to measuring

4.3 Connections




Universal output: interface, supply (see chapter 8 "Universal Output")

7-pole bayonet socket: connection for electrode / measuring cell and temperature probe

4.4 Pop-up clip


Handling:

- Pull at label "open" in order to swing open the pop-up clip.
- Pull at label "open" again to swing open the pop-up clip further.

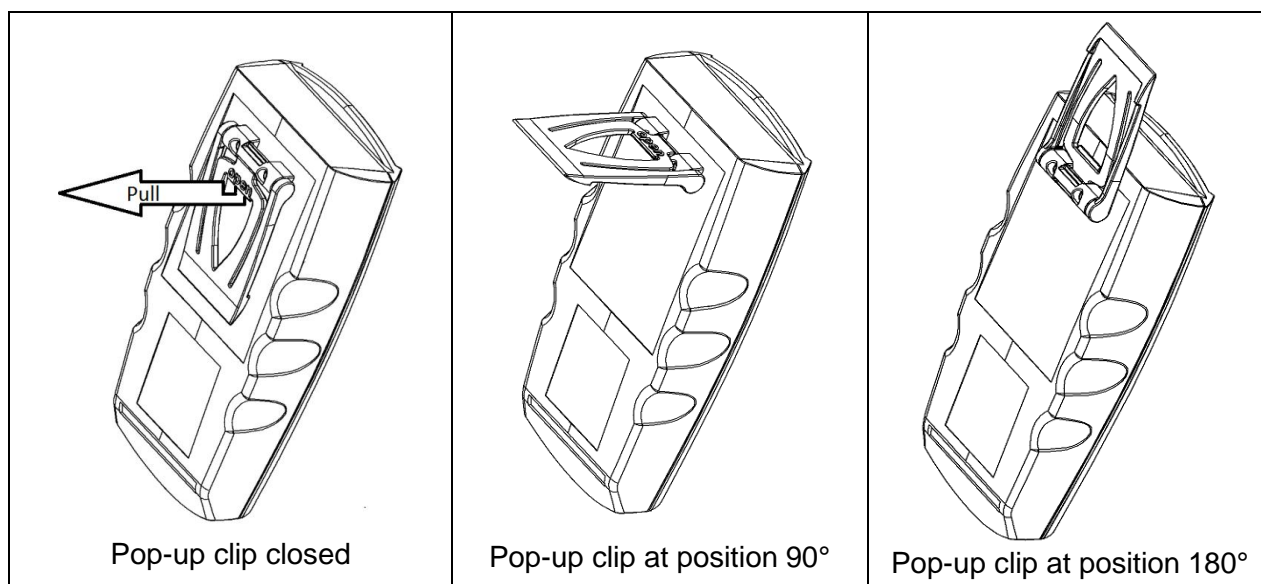


Function:

- The device with a closed pop-up clip can be plainly laid onto a table or attached to a belt, etc.
- The device with pop-up clip at position 90° can be set up on a table, etc.
- The device with pop-up clip at position 180° can be suspended from a screw or the magnetic holder GMH 1300.

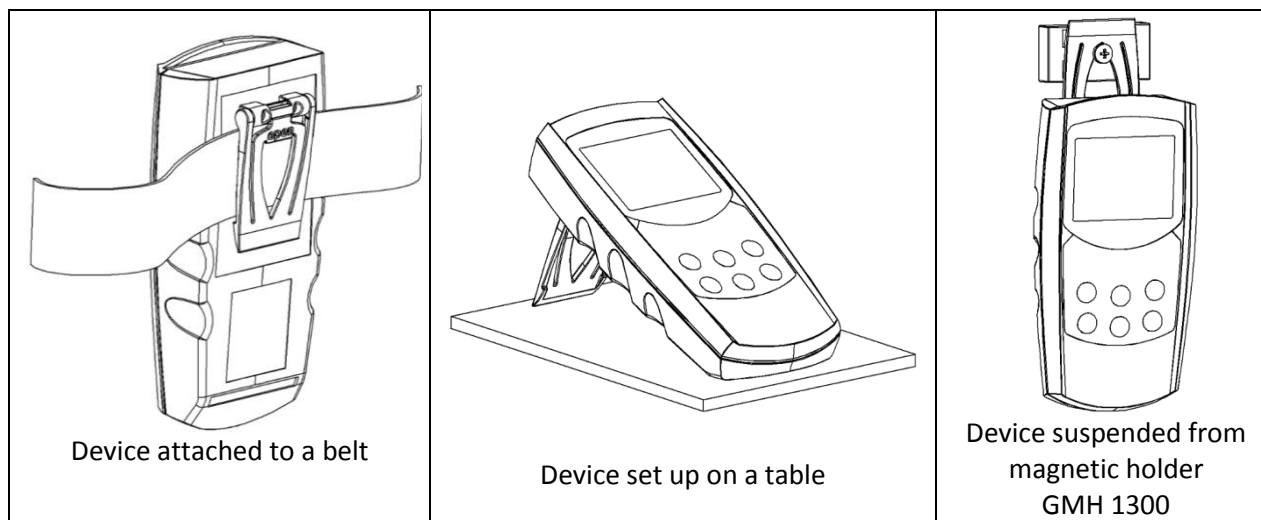

5 Start Operation

Connect electrodes, turn device on via  key.



After segment test the device displays some information on its configuration:

[corr] if zero point or slope correction is active
(see chapter 9 Adjustment of temperature input)

After that the device is ready for measuring.

6 Principles of the measurements

6.1 Basics about conductivity

Definition of conductivity: The ability of a material to conduct electric current: $\gamma = \frac{1}{R \cdot A}$

l: length of the material

A: diameter

R: measured resistance

Unit $[\gamma] = \frac{\text{Siemens}}{\text{meter}} = \frac{\text{S}}{\text{m}}$, common for liquids: $\frac{\text{mS}}{\text{cm}}$ and $\frac{\mu\text{S}}{\text{cm}}$

The conductivity is the reciprocal value of the resistivity.

(The conductance is the reciprocal value of the measured resistance R)

6.2 Measuring ranges and cell constants

Different measuring ranges can be realized depending on the used electrode. Therefore the device offers four cell constant ranges to choose, depending on the correspondent cell constant K:

CELL rAnG	Selectable cell constant K	Application
0.01	0.004000 - 0.015000 • 1/cm	Ultra-pure water, electrodes with K = 0.01
0.1	0.04000 - 0.15000 • 1/cm	Ultra-pure water, electrodes with K = 0.1
1	0.4000 - 1.5000 • 1/cm	Standard electrodes e.g. with K= 0.55 or K=1
10	4.000 - 15.000 • 1/cm	Electrodes with K=10 (for extremely high conductivities)

The cell constant can be selected manually in the configuration menu (see chapter 7 "Configuration") or with the adjustment/calibration function. Then there are two possibilities:

- automatically with an reference solution (temperature compensated)
- adjustment/calibration of the displayed value if actual value of solution is known

6.3 Conductivity measurement

The conductivity measurement is a rather uncomplicated measurement. The standard electrodes are stable for a long time if used correctly and can be adjusted by an integrated Cal-function.



Attention: The device covers a wide measuring range, however a electrode suitable for the measuring range has to be used.

Range CELL - rAnG	1	2	3	4	5
0.01	0.000 - 5.000 $\mu\text{S/cm}$	0.00 - 50.00 $\mu\text{S/cm}$	0.0 - 500.0 $\mu\text{S/cm}$	0 - 5000 $\mu\text{S/cm}$	0.00 - 50.00 mS/cm
0.1	0.00 - 50.00 $\mu\text{S/cm}$	0.0 - 500.0 $\mu\text{S/cm}$	0 - 5000 $\mu\text{S/cm}$	0.00 .. 50.00 mS/cm	0.0 - 500.0 mS/cm
1	0.0 - 500.0 $\mu\text{S/cm}$	0 - 5000 $\mu\text{S/cm}$	0.00 - 50.00 mS/cm	0.0 - 500.0 mS/cm	0 - 1000 mS/cm
10	0 - 5000 $\mu\text{S/cm}$	0.00 - 50.00 mS/cm	0.0 - 500.0 mS/cm	0 - 1000 mS/cm	---

If the range selection is set to „Auto Range“, the range with the best resolution is automatically selected.

However, logger or interface operation requires a manual/fixed selection of the measuring range from the table above (No logger/interface operation with Auto-range!).

6.4 Resistivity measurement

The resistivity is the reciprocal value of the conductivity and the device displays it in kOhm•cm (MOhm•cm).

Range CELL - rAnG	1	2	3	4
0.01	0.10 - 50.00 kOhm•cm	0.1 - 500.0 kOhm•cm	0.000 - 5.000 MOhm•cm	0.000 - 50.00 MOhm•cm
0.1	0.010 - 5.000 kOhm•cm	0.01 - 50.00 kOhm•cm	0.0 - 500.0 kOhm•cm	0.000 - 5.000 MOhm•cm
1	0.0010 - 0.5000 kOhm•cm	0.001 - 5.000 kOhm•cm	0.00 - 50.00 kOhm•cm	0.0 - 500.0 kOhm•cm
10	---	0.0001 - 0.5000 kOhm•cm	0.000 - 5.000 kOhm•cm	0.00 - 50.00 kOhm•cm

If the range selection is set to „Auto Range“, the range with the best resolution is automatically selected. However, logger or interface operation requires a manual/fixed selection of the measuring range from the table above (No logger/interface operation with Auto-range!).

6.5 TDS measurement

At the TDS (total dissolved solids) measurement the filtrate dry residue is determined by means of the conductivity and a conversion factor (C.tdS). Well suited for easy concentration measurements of e.g. salt solutions. The determined value is displayed in mg/l.

Range CELL - rAnG	1	2	3	4
0.01	0.000 - 5.000 mg/l	0.00 - 50.00 mg/l	0.0 - 500.0 mg/l	0 - 5000 mg/l
0.1	0.00 - 50.00 mg/l	0.0 - 500.0 mg/l	0 - 5000 mg/l	---
1	0.0 - 500.0 mg/l	0 - 5000 mg/l	---	---
10	0 - 5000 mg/l	---	---	---

Displayed value TDS = conductivity [in µs/cm, nLF-temp. comp. at 25°C] • C.tdS (input at menu)

Approximately:

C.tdS	
0.50	Monovalent salts with 2 ion types (NaCl, KCl, etc.)
0.50	Natural waters / surface waters, drinking water
0.65 - 0,70	e.g. salt concentration of aqueous fertilizer solutions

Attention: This are only approximate values – good for estimations, but no precise measurement.

For precise measurements the conversion value has to be determined for the corresponding solution for the relevant concentration range.

This may be done by comparison with known reference solutions or by actually evaporating a certain amount of solution with determined conductivity and subsequent weighing of the dry residue.

6.6 Salinity measurement

At the salinity measurement “SAL” the salinity (salt content) of seawater is determined (based on: International Oceanographic Tables; IOT). Standard seawater has a salinity of 35 ‰ (35 g salt per 1 kg seawater).

Commonly the measured value is displayed dimensionless in ‰ (g/kg).

Additionally the term “PSU” (Practical Salinity Unit) is sometimes used, the displayed value is the same.

The salinity measurement has its “own” temperature compensation, i.e. the temperature is automatically taken into account for the salinity measurement. The menu settings regarding the temperature compensation are ignored.




Attention: The salt composition of the different seas is not the identical. Depending on place, weather, tides, etc. there may be considerable divergences to the 35 ‰ according to IOT. Additionally the salt composition may influence the ratio between salinity and actual salt content.

For many salts of the seawater aquaristics the corresponding tables are available (salt weight to salinity according to IOT or conductivity). Considering these tables, very precise salinity measurements can be performed (Therefore we recommend the 4-pole graphite measuring cells LF 400 or LF 425.).

6.7 Electrodes / measuring cells

6.7.1 Assignment bayonet-connector


device pin assignment

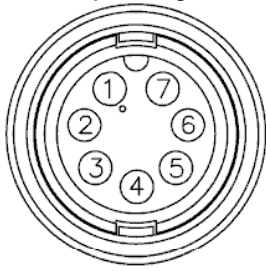


- 1: electrode I+
- 2: electrode U+
- 3: electrode U-
- 4: electrode I-
- 5: temperature sensor
- 6: temperature sensor
- 7: *not connected*

6.7.2 Design and selection

Basically there are two types of measuring cells: 2-pole and 4-pole cells. The operation is done similarly; the 4-pole measuring cells can compensate polarization effects and – up to some degree – soiling due to its complex measuring method.

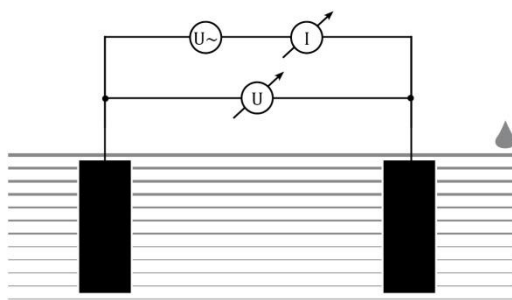

2-pole measuring cell

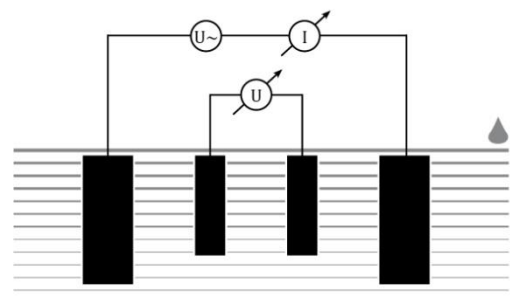

4-pole measuring cell

The selection of a suitable electrode depends on the desired application.

- The **widest range of application** is guaranteed by high-quality 4-pole graphite measuring cells (**LF 400 or LF 425**, all the above applications and: seawaters, titration and sewage).
- For **low conductivities (<100 µS/cm)** stainless steel measuring cells offer advantages (**LF 200 RW**, pure and ultrapure water, boiler water, osmosis, filter technology).
- 2-pole platinum electrodes with glass shaft are good solution for used in **petrol, diesel, etc. with low conductivities (< 1000 µS/cm)** (**LF 210**)

6.8 Temperature compensation

The conductivity of aqueous solutions depends on its temperature. The temperature dependency is strongly dependent on the type of solution. The temperature compensation recalculates solutions' conductivity to a consistent reference temperature. The most common reference temperature is 25 °C.

6.8.1 Temperature compensation “nLF” according to EN 27888

For most applications (e.g. in the area of fish farming, surface or drinking water measurements, etc.) the non-linear temperature compensation for natural water (“nLF”, according to EN 27888) is sufficiently accurate. The common reference temperature is 25 °C.

Recommended application range of nLF-compensation: between 60 µS/cm and 1000 µS/cm.

6.8.2 Linear temperature compensation and determination of temperature coefficient “t.Lin”

If the actual function needed for exact temperature compensation is not known, “linear temperature compensation” is normally selected (Menu, t.Cor = Lin, t.Lin corresponds TK_{lin}), i.e. one assumes that the actual temperature dependency at the considered concentration range is approximately equal:

$$LF_{Tref} = \frac{LF_{Tx}}{1 + \frac{TK_{lin}}{100\%} \cdot (Tx - Tref)}$$

Temperature coefficient of about 2.0 %/K are most common.

A temperature coefficient can be determined for example by measuring a solution with deactivated temperature compensation at two different temperatures (T1 and T2).

$$TK_{lin} = \frac{(LF_{T1} - LF_{T2}) \cdot 100\%}{(T1 - T2) \cdot LF_{T1}}$$

TK_{lin} is the value input at the menu "t.Lin".









LF_{T1} conductivity at temperature T1

LF_{T2} conductivity at temperature T2

7 Configuration















Some menu points depend on current device settings.

To change device's settings, press "menu"  for 2 seconds. This will activate the configuration menu (main display: "SEt"). Pressing "menu"  changes between the menus points, pressing  jumps to the referring parameters, which can be selected with key . The parameter value can be changed with  or . Pressing "menu"  again jumps back to the main configuration menu and saves the settings. Pressing "enter"  finishes the configuration.



Pressing "menu" and "store" at the same time for more than 2 seconds will reset the device to factory defaults.

If no key is pressed for more than 2 minutes the configuration will be aborted. All changes will be discarded!

Menu	Parameter	Value	Description		
		 or 			
	Set Configuration: General configuration				
		Input: Selection of measured variable			**
		Cond	Conductivity		
		rES	Resistivity		
		SAL	Salinity		
		tdS	Total dissolved solids		
		TDS measurement: conversion factor (only if Inp = tdS)			
		0.40 - 1.00	Conversion factor for TDS measurement		
		Cell Range: Adjustment of cell constant: cell constant range			
		0.01	Ultrapure water, electrodes with K ~ 0.01		
		0.1	Ultrapure water, electrodes with K ~ 0.1		
		1	Standard electrodes, i.e. with K= 0.55 or K=1		
		10	Electrodes with K=10		
		Cell Factor: Adjustment of cell constant: multiplication factor			
		0.4000 - 1.5000	Multiplication factor of cell constant Cell constant CELL = CELL Range * CELL Factor		
		Range: Selection of display range (conductivity, resistivity or tdS)			
		Auto	Automatic range selection		
		e.g. 0.0 - 500.0 µS/cm	Example for CELL rAng 1 and InP Cond: others in chapter 6.2		
		...			
		0 .. 1000 mS/cm	Example for CELL rAng 1 and InP Cond: others in chapter 6.2		
		Automatic adjustment/calibration with reference solution (only if Inp = Cond)			
		Edit	Manual adjustment to reference value		
		REF.S	Choice of standard reference solutions		
		REF.S: Choice of standard reference solutions for automatic adjustment/cal.			
		1413 µS/cm	Reference solution 0.01 M KCL		
		2760 µS/cm	0.02 M KCL		
		12.88 mS/cm	0.1 M KCL		


		50 mS/cm	Sea-water reference solution KCL		
		111.8 mS/cm	1 M KCL		
Unit	Unit t: Selection of temperature unit				
	°C	All temperature values in degree Celsius			
	°F	All temperature values in degree Fahrenheit			
tInP	t-Input: Selection of temperature input type				
	NTC	NTC 10k sensor			
	Pt	Pt1000 sensor			
tCor	Temperature compensation (not for InP = SAL)				
	oFF	No temperature compensation of conductivity measurement			
	nLF	Non-linear function for natural waters according to EN 27888 (DIN 38404), ground, surface and drinking water			
	NaCl	Compensation for weak NaCl-solutions (pure and ultrapure water)			
	Lin	Linear temperature compensation			
tLin	Compensation coefficient (only if t.Cor = Lin)				
	0.300 3.000	Temperature compensation coefficient in %/K			
tREF	Reference temperature of temperature compensation (only if t.Cor = Lin or nLF)				
	25 °C / 77 °F	Reference temperature 25 °C / 77 °F			
	20 °C / 68 °F	Reference temperature 20 °C / 68 °F			
Cnt	Adjustment/Calibration: Adjustment reminder period (factory setting: 180)				
	1 ...730	Adjustment reminder period (in days)			
	oFF	No adjustment reminder			
Auto	Auto Hold: Automatic measuring value identification (only if Logger = oFF)				
	on	Auto measuring value identification (only if Logger = oFF) Auto Hold			
	oFF	Standard hold function on keypress (only if Logger = oFF)			
P.oFF	Auto Power-Off : Selection of power-off delay				
	1...120	Power-off delay in minutes. Device will be automatically switched off as soon as this time has elapsed if no key is pressed/no interface communication takes place.			
	oFF	Automatic power-off function deactivated (continuous operation)			
Lite	Background illumination				
	oFF:	Illumination deactivated			
	5 ... 120	Turn off illumination after 5... 120s (factory settings: 5 s)			
	on:	Illumination always on			
Set Out	Set Output: Configuration of universal output				
	oFF	Interface and analog output off -> minimal power consumption			
Out	SEr:	Serial interface activated			
Adr.	01,11..91	Base address for serial interface communication			
Set Corr	Set Corr: Measurement correction			**	
	Zero point adjustment / offset of temperature measurement			**	
OFFS	oFF	No zero point adjustment for temperature measurement			
	-5.0 ... 5.0°C	Offset of temperature measurement in °C			
	Slope adjustment of temperature measurement			**	
SCAL	oFF	No slope adjustment for temperature measurement			
	-5.00 ... 5.00	Slope correction of temperature measurement in [%]			
Set CLOC	Set Clock: Einstellen der Echtzeituhr				
	HH:MM	Clock: set time hours:minutes			
	YYYY	Year: set year			
	TT.MM	Date: set date day.month			
rEAd CAL.	rEAd CAL: Read calibration data: see chapter 11.2 "Calibration storage (rEAd CAL)"				

8 Universal Output

The output can be used as serial interface (for USB5100 interface converter). If the output is not needed, it is strongly recommended to deactivate it (Out oFF) to lower power consumption. This increases battery life time.

If the device is used together with interface adapter USB 5100 the device is supplied from the interface.

device pin assignment:

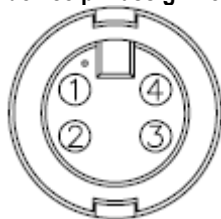

1: external supply +5V, 50mA

2: GND

3: TxD/RxD (3.3V Logic)

4: without function



Only suitable adaptor cables are permitted (accessories)!

8.1 Interface

The following standard software packages are available:

- **GSOFT3050:** Operating and evaluation software for the integrated logger function
- **EBS20M / -60M:** 20-/60-channel software for measuring value display
- **GMHKonfig:** Configuration Software (for free on internet)

In case you want to develop your own software we offer a **GMH3000-development package** including:

- a universally applicable Windows functions library ('GMH3x32e.DLL') with documentation, can be used by all 'established' programming languages, suitable for: Windows XP™, Windows Vista™, Windows 7™
- Programming examples Visual Basic™, Delphi 1.0™, Testpoint™ etc.

The device has 2 channels:

- Channel 1: current measuring value (Cond, rES, TDS or SAL) and base address
- channel 2: temperature value



The measuring-/ alarm- and display range values read back from the interface are always in the selected measurement unit!



Attention: The auto-range-function should be turned off if interface is used.

9 Adjustment of temperature input

The temperature input can be adjusted with offset and scale. A reasonable adjustment presumes reliable references (e.g. ice water, controlled precision water bath, etc.).

If the inputs are adjusted (i.e. offset and scale are different from default settings) the device will shortly display "Corr" after turned on.

Default setting for offset and scale are 'off' = 0.0, i.e. inputs are not changed.

Zero point correction:


Displayed value = measured value – OFFS

Zero point and slope correction: **Displayed value = (measured value – OFFS) * (1 + SCAL / 100)**

Displayed value °F = (meas. value °F - 32°F - OFFS) • (1 + SCAL / 100)

10 Automatic adjustment/calibration of cell constant

Besides the direct input of the cell constant (see below) via the menu ("CELL FACt") the cell constant can also be determined automatically (Please select CELL rAnG in menu before):

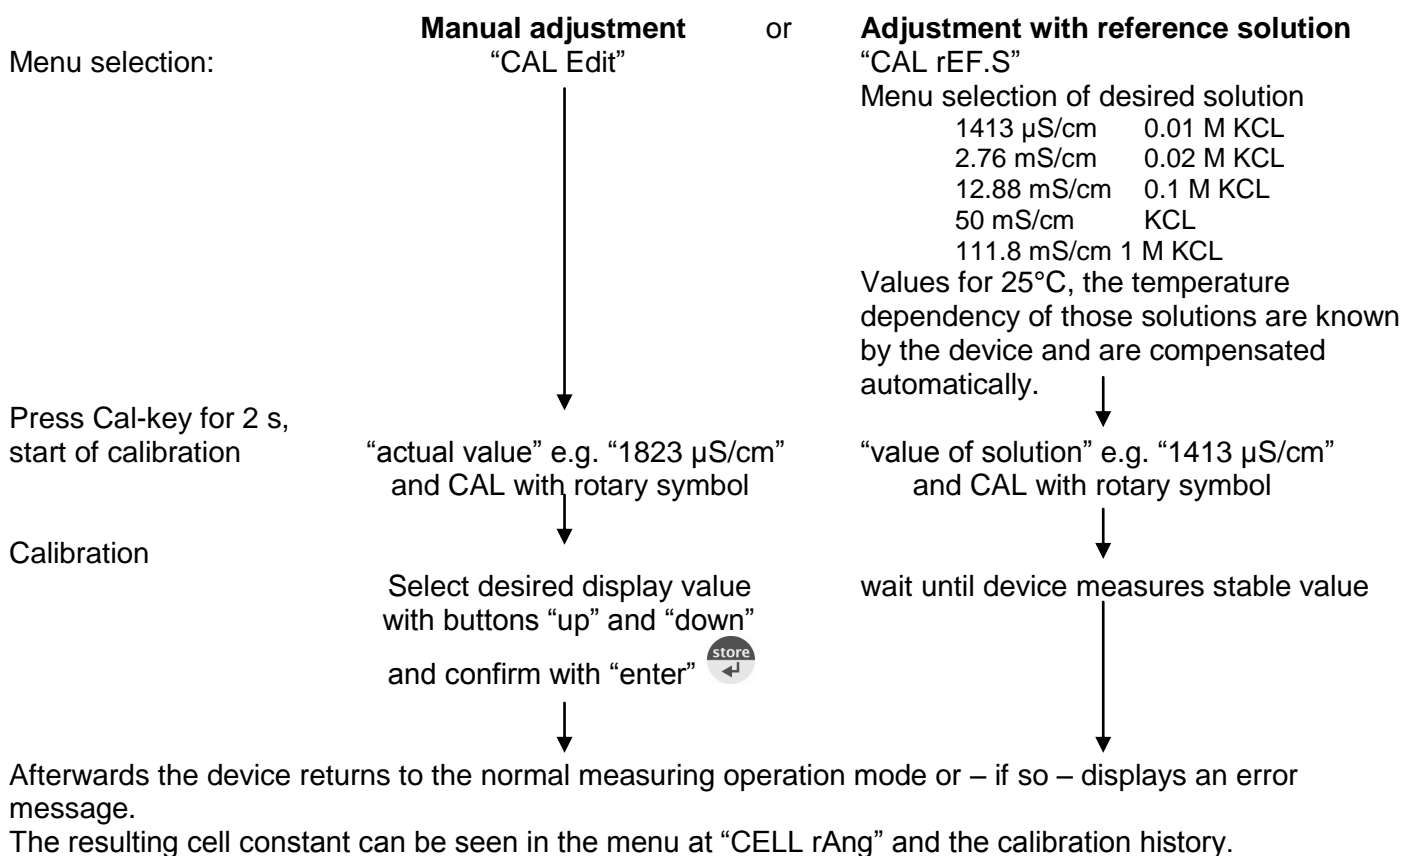

Error messages of automatic adjustment/calibration:

CAL Err.1	Cell constant too high	Determined cell constant must not exceed 1.5 * cell range
CAL Err.2	Cell constant too small	Determined cell constant must not fall below 0.4 * cell range
CAL Err.3	Solution of wrong range	Wrong cell range / wrong solution / far beyond tolerance
CAL Err.4	Wrong temperature	Beyond permitted temperature: 0.0 – 34.0 °C (or 0.0 – 27.0 °C at 111.8 mS/cm)

Alternative to automatic adjustment:

Manual calculation of cell constant with a reference solution

Example KCl-solution $c = 0.01 \text{ M}$: $1413 \mu\text{S cm}^{-1}$ at 25°C

At other temperatures switch temperature compensation off (t.Cor = OFF) and use the referring conductivity!

Conductivity_{displayed} = $1900 \mu\text{S cm}^{-1}$ if selected cell constant is 1.000 cm^{-1} (CELL FACt = 1.000)

Conductivity of solution at solution temperature 25 °C: Conductivity_{real} = $1413 \mu\text{S cm}^{-1}$

Cell constant $k = \text{conductivity}_{\text{real}} / \text{conductivity}_{\text{displayed}} [\text{cm}^{-1}]$
 $= 1413 / 1970 * \text{cm}^{-1} = \mathbf{0.7437 \text{ cm}^{-1}}$ (Enter CELL FACt of 0.7437)

11 GLP

GLP (Good Laboratory Practice) includes regular check of devices and accessories. For pH measurements it is highly important to ensure correct pH calibration. The device provides the following functions to help with this.

11.1 Calibration interval (C.Int)

You can input the interval after which the device reminds you to recalibrate.

The interval times should be chosen according to the application and the stability of the electrode. "CAL" flashes on the display as soon as the interval has expired.

11.2 Calibration storage (rEAd CAL)

The last calibration are stored with results and date and can be read out.

Display calibration data:

Historical calibration data can be comfortably read out via PC software GMHKonfig and GSOF3050 or displayed directly at the device:



Press for 2 seconds:
The display will show:

SEt
CONF

(configuration level)



Press several times until this is displayed:

rEAd
CAL.

read cal. = "read calibration data"

Press shortly: switch between:



- CELL = cell constant
- C.rEF = reference value, at which cell constant has been adjusted
- Display of date + time of data set



Quit calibration data set display

12 Accuracy Check / Adjustment Service

You can send the device to the manufacturer for adjustment and inspection.

Calibration certificate - DKD certificate - official certifications:

If the measuring instrument is supposed to receive a calibration certificate, it has to be sent to the manufacturer (declare test points).

If the device is certificated together with a suitable sensor very high overall accuracies are possible.

Basic settings can only be checked and – if necessary – corrected by the manufacturer.

A calibration protocol is enclosed to the device ex works. This documents the precision reached by the production process.


13 Replacing Batteries

Before changing batteries, please read the following instruction and follow it step by step.

Not following the instruction may cause harm to the instrument or the protection against ingress of water and dust may be lost!

Avoid unnecessary opening of the instrument!

1. Open the 3 Phillips screws at the backside of the instrument.
2. Lay down the still closed instrument, so that the display side points upwards.
The lower half of the housing incl. the electronics should be kept lying down during battery change.
This avoids loss of the 3 sealing rings placed in the screw holes.
3. Lift off upper half of housing. Keep an eye on the six function keys, to be sure not to damage them.
4. Change carefully the two batteries (Type: AAA).
5. Check: Are the 3 sealing rings placed in the housing?
Is the circumference seal of the upper half sound and clean?
6. Close the housing, taking care that it is positioned correctly, otherwise the sealing may be damaged. Afterwards press the two halves together, lay the instrument with display pointing downwards and screw it together again
Take care to screw only until you feel increasing resistance, higher screwing force does not result in higher water protection!

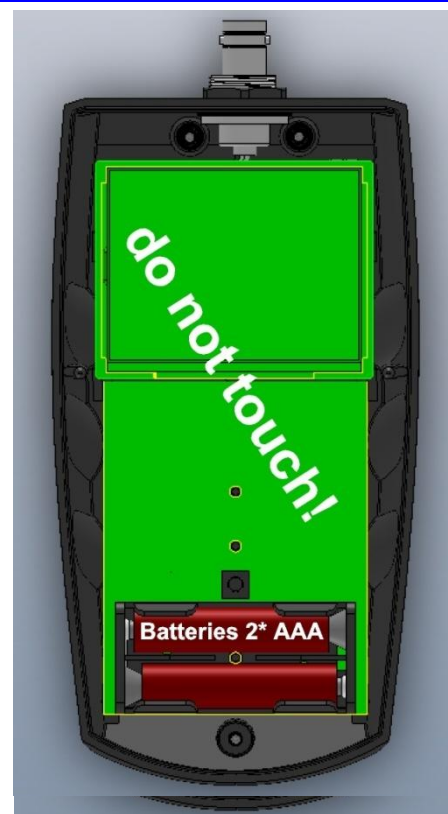

14 Error and System Messages

Error messages for measurement

	Description	What to do?
No display or confused characters, Device does not react on keypress	Battery empty	Replace battery
	Mains operation: wrong voltage or polarity	Check power supply, replace it if necessary
	System error	Disconnect battery and power supply, wait shortly, then reconnect
	Device defective	Return to manufacturer for repair
Err.1	Measured value above allowable range	Check: pressure not within sensor range? -> measuring value too high!
	Sensor defective	Return to manufacturer for repair
Err.2	Measured value below allowable range	Check: pressure not within sensor range? -> measuring value too low!
	Sensor defective	Return to manufacturer for repair
Err.7	System error	Return to manufacturer for repair
	Value extremely out of measuring range	Value extremely out of measuring range
----	Could not calculate display value	
	• measuring range or input range exceeded	Check range parameter
	• measured values are instable	Wait for signal regulation of the device
> CAL < CAL flashing in upper display	Either preset calibration interval has expired or last calibration is not valid	Device has to be calibrated!

Error messages for automatic cell constant adjustment/calibration:

CAL Err.1	Cell constant too high	Determined cell constant must not exceed 1.2* cell range
CAL Err.2	Cell constant too small	Determined cell constant must not fall below 0.4* cell range
CAL Err.3	Solution of wrong range	Wrong cell range / wrong solution / far beyond tolerance
CAL Err.4	Wrong temperature	Beyond permitted temperature: 0.0 – 34.0 °C (or 0.0 – 27.0 °C at 111.8 mS/cm)

If “bAt” is flashing the battery will be exhausted soon. Further measurements are possible for short time. If “bAt” is displayed continuously the battery is ultimately exhausted and has to be replaced. Further measurements aren't possible any more.

15 Reshipment and Disposal

15.1 Reshipment

 


All devices returned to the manufacturer have to be free of any residual of measuring media and/or other hazardous substances. Measuring residuals at housing or sensor may be a risk for persons or environment



Use an adequate transport package for reshipment, especially for fully functional devices. Please make sure that the device is protected in the package by enough packing materials.

15.2 Disposal instructions



Batteries must not be disposed in the regular domestic waste but at the designated collecting points.

The device must not be disposed in the unsorted municipal waste! Send the device directly to us (sufficiently stamped), if it should be disposed. We will dispose the device appropriate and environmentally sound.

16 Specification

Measuring ranges	count	5		
		Cell constant 0.4 ... 1.5	Cell constant 0.04 ... 0.15	Cell constant 0.004 ... 0.015
	Conductivity 1 *)	0.0 ... 500.0 $\mu\text{S/cm}$	0.00 ... 50.00 $\mu\text{S/cm}$	0.000 ... 5.000 $\mu\text{S/cm}$
	" 2 *)	0 ... 5000 $\mu\text{S/cm}$	0.0 ... 500.0 $\mu\text{S/cm}$	0.00 ... 50.00 $\mu\text{S/cm}$
	" 3 *)	0.00 ... 50.00 mS/cm	0 ... 5000 $\mu\text{S/cm}$	0.0 ... 500.0 $\mu\text{S/cm}$
	" 4 *)	0.0 ... 500.0 mS/cm	0.00 ... 50.00 mS/cm	---
	" 5 *)	0 ... 1000 mS/cm	---	---
	Resistivity	0.0010 ... 500.0 $\text{k}\Omega\cdot\text{cm}$	0.010 ... 5000 $\text{k}\Omega\cdot\text{cm}$	0.0001 ... 50.00 $\text{M}\Omega\cdot\text{cm}$
	TDS	0.0 ... 5000 mg/l	0.00 ... 5000 mg/l	0.000 ... 5000 mg/l
Supported cell constants	Salinity	0.0 ... 70.0 g/kg (PSU)		
	Temperature	-5.0 ... +100.0 °C, Pt1000 or NTC (10k) 23.0 ... 212.0 °F		
Accuracy	Conductivity	$\pm 0.5\%$ of m.v. $\pm 0.1\%$ FS (system accuracy is dependent on electrode!)		
	Temperature	$\pm 0.2\text{ K}$		
Connections	Conductivity, Temperature	7-pole bayonet socket for connection of different measuring cells Supported temperature sensors Pt1000 and NTC 10k		
	Interface / ext. supply	4-pole bayonet socket for serial interface and supply (USB Adapter USB 5100)		
Display		4 ½ - digit, 7-segment, illuminated (white)		
Add. functions		Min / max / hold function		
Adjustment/ Calibration		Cell constant manually or automatically via selectable reference solution		
GLP		Selectable adjustment intervals (1 to 730 days, CAL-warning after expiration) Storage: latest 16 adjustments		
Housing		Break-proof ABS housing, incl. silicone protective cover		
	Protection class	IP65 / IP67		
	Dimensions L*W*H [mm]	160 * 86 * 37 incl. silicone protective cover, approx. 250 g incl. battery and cover		
Working conditions		-25 to 50 °C; 0 to 95 % RH (non condensing)		
Storage temperature		-25 to 70 °C		
Power supply		2*AAA battery (included in scope of supply) or external		
	Current consumption	6.25 mA (for Out = oFF, equivalent to 160 h), backlight ~10mA (auto-off)		
	Battery indicator	4-stage battery state indicator, Change battery display for exhausted battery: "bAt", warning: "bAt" flashing		
Auto-off function		Device will be automatically switched off if no key is pressed/no interface communication takes place for the time of the power-off delay. The power-off delay can be set to values between 1 and 120 min.; it can be completely deactivated.		
EMC		The device corresponds to the essential protection ratings established in the Regulations of the Council for the Approximation of Legislation for the member countries regarding electromagnetic compatibility (2004/108/EG) Additional fault: <1%		

*) choice of electrode may limit the operational range, although a larger theoretical range is available from the instrument's side. Please refer to chapter 6.7

Contactos/Contacts:

Comercial/Commercial:

Fernando Mena Costa

e-mail: fcosta@bhb.pt

Tel: (+351) 21 843 64 00

Fax: (+351) 21 843 64 09

Assistência/Service:

Patricia Costa

e-mail: ppcosta@bhb.pt

Tel: (+351) 21 843 64 00

