

Navigator 600 DATASHEET

JUNHO 2013

Tel: (+351) 21 843 64 00
Fax: (+351) 21 843 64 09
geral@bhb.pt www.bhb.pt

Navigator 600 Silica Silica analyzer

Cost-effective automated
monitoring of silica for a wide
range of applications



Lowest cost-of-ownership

- up to 90 % lower reagent consumption than competitors' analyzers
- labour-saving 5 minute annual maintenance and up to 3 months unattended operation
- field upgradeable from 2 to 4; 2 to 6 or 4 to 6 streams

Easy to use

- familiar Windows™ menu system
- built-in context-sensitive help

Full communications

- web- and ftp-enabled for easy data file access, remote viewing and configuration
- optional Profibus® DP V1.0

Fast, accurate and reliable

- automatic cleaning, calibration and zero deliver high accuracy measurements
- extensive electronics, measurement and maintenance diagnostics ensure high availability
- true auto-zero compensates for sample color, turbidity and background silica in reagents
- temperature-controlled reaction and measurement section for optimum response

Introduction

Many years of experience and innovation in the design and successful application of continuous chemical analyzers has been combined with the latest electronics and production technologies to produce the Navigator 600 Series of analyzers from ABB.

Developed as fully continuous analyzers offering wide dynamic ranging, the Navigator 600 Series incorporates greater simplicity and functionality than ever before. Based on colorimetric techniques, they feature a liquid handling section carefully designed to reduce routine maintenance. Utilizing powerful electronics, advanced features such as automatic calibration, continuous sample analysis and programmable multi-stream switching ensure accurate and simple measurement of silica.

Process data, as well as the content of alarm and audit logs, can be saved to a removable SD card in binary and comma-delimited formats for record keeping and analysis using ABB's DataManager data analysis software package.

A very low cost of ownership has been achieved by reducing the reagent consumption and simplifying the maintenance requirements.

The size of the instrument has been reduced to a compact, ergonomically-designed, wall-mounted case thus providing a very small footprint.

Applications

Typical applications for the Navigator 600 Silica are:

- **Demineralization Plants for Power and Process Industries.**
 - Monitoring the outlet of the anion and mixed beds for silica breakthrough, providing indication of bed exhaustion and final water quality.
- **Boiler Systems.**
 - Monitoring boiler drum water, providing information on the contamination levels in the boiler.
 - Monitoring silica carryover in saturated steam thus protecting turbine blades from potentially excessive scale build up.
 - Monitoring the exhaustion of ion exchangers in a Condensate Polishing Plant.

Operation

General

The Navigator 600 Silica is an on-line analyzer, designed to provide continuous monitoring of silica concentration utilizing a standard colorimetric analysis principle.

Liquid Handling

The chemistry employed for silica measurement is the industry standard Molybdenum Blue reaction. Sample and reagents are drawn into the instrument by two multichannel peristaltic pumps. These are designed and constructed to ensure only simple yearly maintenance is required. The reagents are added to the sample in a temperature-controlled reaction block and the fully reacted sample is then passed through an in-line measuring cuvette.

The optical measuring system enables accurate detection of silica concentrations from 0 to 5000 ppb.

The instrument includes a manual sampling facility that enables the analysis of grab samples.



Liquid Handling Section

Solution Replacement


	Continuous
Reagents	3 months
Calibration Standard	3 months
Cleaning Solution	3 months

Electronics

The main electronic transmitter consists of a display and key pad accessible from the front of the unit. Indication of all parameters is provided by a large backlit LCD display that is easy to read in all light conditions. Under normal operating conditions, measured values are displayed; programming data is displayed during set-up and also on demand. Units and range of measurement, alarm values and standard solution values are examples of the many programmable functions.

Keeping simplicity of operation at the forefront of design, six fingertip-operated tactile membrane switches control local operation of the analyzer and provide easy access to all parameters.

The Navigator 600 Silica is provided with 4 dedicated relays, 6 user-programmable relays and 6 current outputs as standard. Profibus DP V1.0 is available as an option.

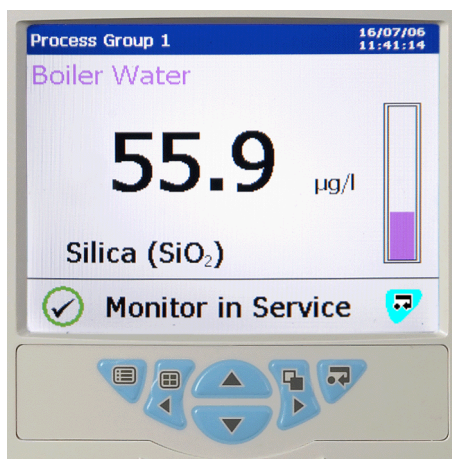

Display and Keypad

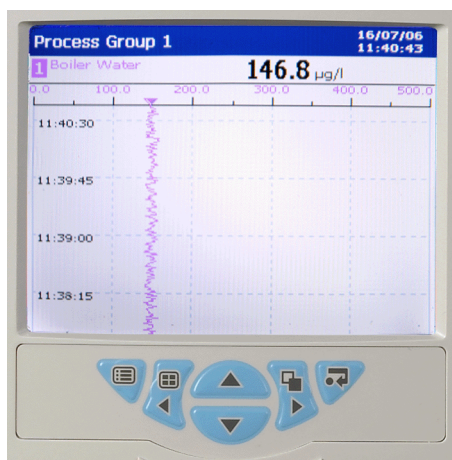


Chart View Display


Ethernet Communications

The Navigator 600 Silica can provide 10BaseT Ethernet communications via a standard RJ45 connector and uses industry-standard protocols TCP/IP, FTP and HTTP. The use of standard protocols enables easy connection into existing PC networks.

Data File Access via FTP (File Transfer Protocol)

The Navigator 600 Silica features FTP server functionality. The FTP server in the analyzer is used to access its file system from a remote station on a network. This requires an FTP client on the host PC. Both MS-DOS® and Microsoft® Internet Explorer version 5.5 or later can be used as an FTP client.

- Using a standard web-browser or other FTP client, data files contained within the analyzer's memory or memory card can be accessed remotely and transferred to a PC or network drive.
- Four individual FTP users' names and passwords can be programmed into the Navigator 600 Silica. An access level can be configured for each user.
- All FTP log-on activity is recorded in the audit log of the instrument.
- Using ABB's data file transfer scheduler program, data files from multiple instruments can be backed-up automatically to a PC or network drive for long-term storage, ensuring the security of valuable process data and minimizing the operator intervention required.

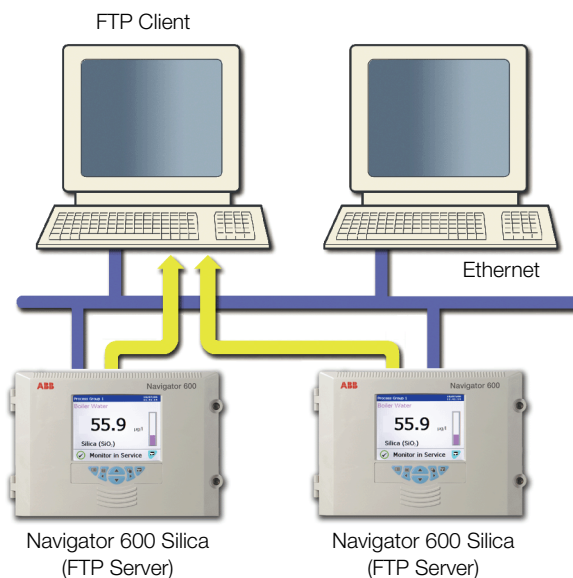

Embedded Web Server

The Navigator 600 Silica has an embedded web-server that provides access to web pages created within the instrument. The use of HTTP (Hyper Text Transfer Protocol) enables standard web browsers to view these pages.


- Accessible through the web pages are the current display of the analyzer, detailed information on stream values, reagent and solution levels, measurement status and other key information.
- The audit and alarm logs stored in the Navigator 600 Silica's internal buffer memory and memory card can be viewed on the web pages.
- Operator messages can be entered via the web server, enabling comments to be logged to the instrument.
- The web pages and the information they contain are refreshed regularly, enabling them to be used as a supervision tool.
- The analyzer's configuration can be selected from an existing configuration in the internal memory or a new configuration file transferred to the instrument via FTP.
- The analyzer's real-time clock can be set via the web server. Alternatively, the clocks of multiple analyzers can be synchronized using ABB's File Transfer Scheduler software.

Email Notification

Via the Navigator 600 Silica's built-in SMTP client, the analyzer is able to email notification of important events. Emails triggered from alarms or other critical events can be sent to multiple recipients. The analyzer can also be programmed to email reports of the current measurement status or other parameters at specific times during the day.

Profibus


The Navigator 600 Silica can be equipped (option) with Profibus DP V1.0 to enable full communications and control integration with distributed control systems.

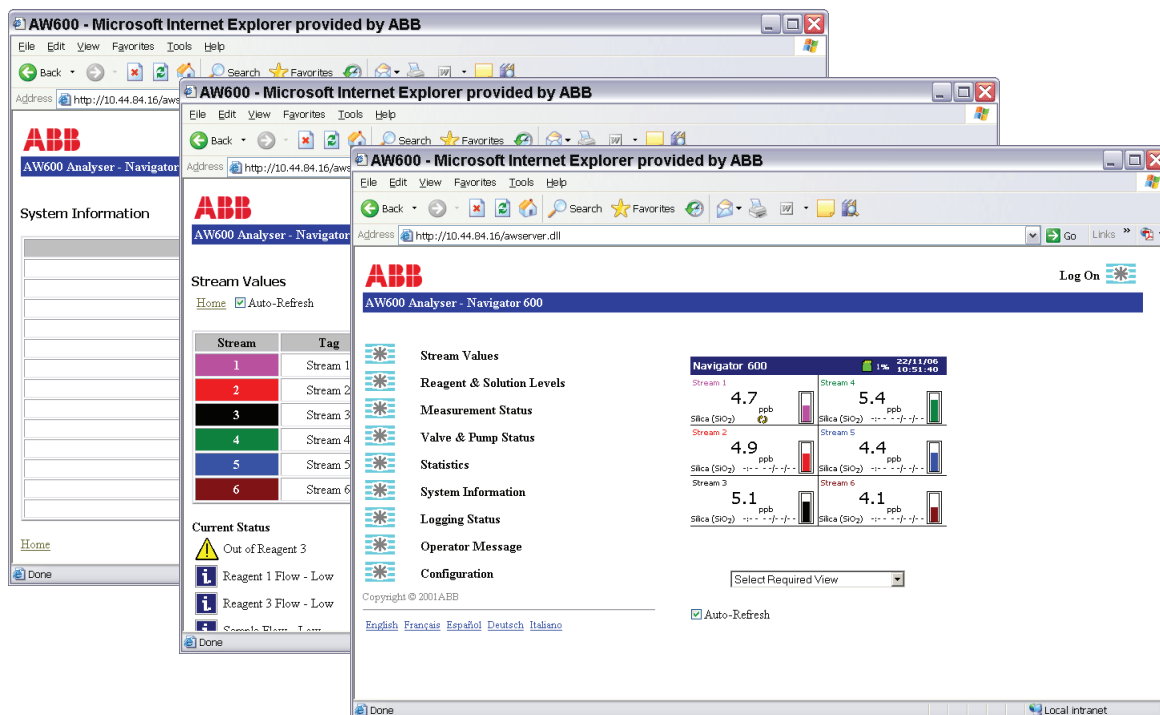

Maintenance

The analyzer has been designed to maximize on-line availability by reducing routine maintenance to a minimum.

Yearly maintenance consists of simply replacing pump capstans and pump tube assemblies, an operation that can take as little as five minutes.

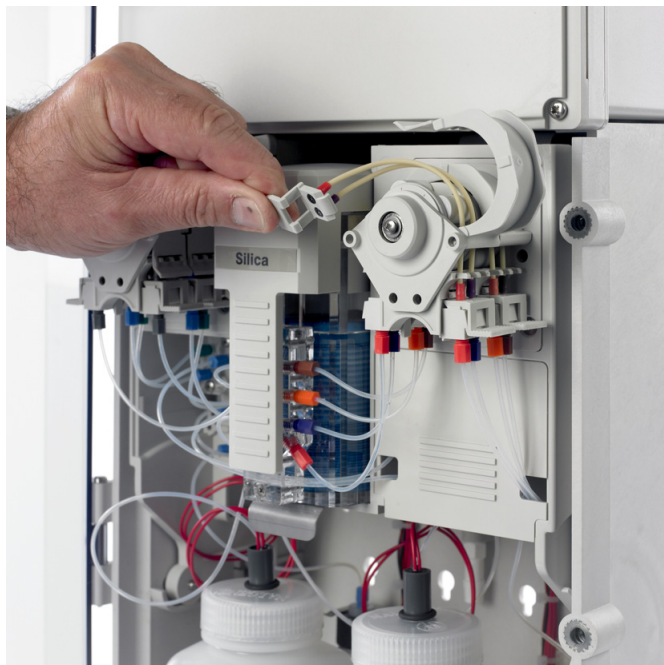

Simple to replace pump tube assemblies


Fully automatic calibration, zeroing and cleaning functions enable the analyzer to keep operational with minimal manual intervention. A predictive alarm alerts the user to reagent solution replacement being required. The cleaning and calibration solutions have a sensor to detect when replacement is necessary.

Options

Multi-stream Facility

A fully programmable multi-stream option is available on the Navigator 600 Silica on-line analyzer, providing up to six-stream capability including individual current output and visual indication as well as user-programmable stream sequencing.

The analyzers are designed to be easily upgradeable in the field to two, four or six streams.

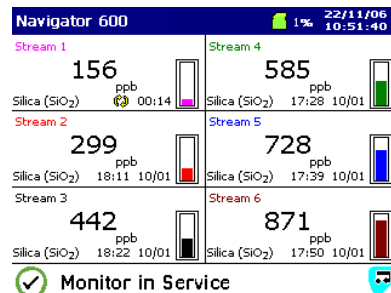

Six Streams Display

Specification

Silica Measurement

Range

Fully user programmable 0 to 5000 ppb SiO₂, minimum range 0 to 50 ppb

Measurement Modes

Sample stream options

Available as single-stream

or

multi-stream in 2, 4 or 6 stream configurations

Single-stream performance

Measurement method

Continuous chemistry and measurement operation.

Response time

<15 mins. (90% step change)

Typical accuracy

<±2% of reading or ±0.5 ppb (whichever is the greater) over the range 0 to 500 ppb

<±5% of reading over the range 500 to 5000 ppb

Repeatability

<±2% of reading or ±0.5 ppb (whichever is the greater) over the range 0 to 500 ppb

<±3% of reading over the range 500 to 5000 ppb

Multi-stream performance

Measurement method

Continuous chemistry with a minimum 12 minutes per stream measurement update.

Sample rate programmable between 12 minutes minimum to 60 minutes maximum.

Response time

Minimum update time 12 minutes

Typical accuracy

<±2% of reading or ±0.5 ppb (whichever is the greater) over the range 0 to 500 ppb*

<±5% of reading over the range 500 to 5000 ppb*

* Dependent on sample rate – refer to table on page 2

Repeatability

<±2% of reading or ±0.5 ppb (whichever is the greater) over the range 0 to 500 ppb

<±3% of reading over the range 500 to 5000 ppb

Solution Requirements

Number

4 reagents (2.5 l bottles)

1 standard solution (0.5 l bottle)

1 cleaning solution (0.5 l bottle)

Reagent Consumption

Continuous operation mode

2.5 l max. per 90 days

Display

Color, passive matrix, liquid crystal display (LCD) with built-in backlight and brightness adjustment

Diagonal display area 144 mm (5.7 in.)

76800 pixel display*

*A small percentage of the display pixels may be either constantly active or inactive. Max. percentage of inoperative pixels <0.01%

Dedicated operator keys

- Group Select/Left cursor
- View Select/Right cursor
- Menu key
- Up/Increment key
- Down/Decrement key
- Enter key

Mechanical Data

Ingress protection

IP31** – Wet section (critical components IP66)

IP66 – Transmitter

Dimensions

Height 638 mm (25.1 in.) plus constant head bracket 186 mm (7.3 in.)

Width 271 mm (10.7 in.)

Depth 182 mm (7.2 in.)

Weight 15 kg (33 lbs)

Materials of construction

Electronics enclosure 20% glass loaded polypropylene

Main enclosure Noryl

Lower tray 10% glass loaded polypropylene

Door Acrylic

Sample connections

Inlet 6 mm (1/4 in.) flexible hose connection

Outlet 9 mm (1/4 in.) flexible hose connection

** Not evaluated for UL or CB

Environmental Data

Ambient Operating Temperature

5 to 45 °C (41 to 113 °F)

Sample Temperature

5 to 55 °C (41 to 131 °F)

Sample Particulate

<60 microns

<10 mg/l⁻¹

Sample Flow Rate

>5 ml/min / <500 ml/min

Sample Pressure

Atmospheric

Storage Temperature

-20 to 75 °C (-4 to 167 °F)

Ambient Operating Humidity

Up to 95% RH non-condensing

Electrical

Supply ranges

110 to 240 V max. AC 50/60 Hz \pm 10 % (90 to 264 V AC, 45/65 Hz)

18 to 36 V DC 10A power supply typical (optional)

Power consumption

75 W max. – AC

100 W max. – DC

Analog Outputs

Single and multi-stream analyzers

6 isolated current outputs:

- galvanically isolated (to 500 V dc) from each other and all other circuitry
- fully assignable and programmable over a 0 to 20 mA range (up to 22 mA if required)
- drives maximum 750 Ω load

Wetted Materials

PMMA (acrylic)

PP (polypropylene)

PTFE

PP (20% glass filled)

PEEK

NBR (nitrile)

EPDM

Santoprene

PTFE (15% polysulphane)

NORYL

Borosilicate glass

Acrylic adhesive

Alarms / Relay Outputs

Single and multi-stream analyzers

One per unit:

- Out of service alarm relay
- Calibration in progress alarm relay
- Calibration failed alarm relay
- Maintenance/Hold alarm relay

Six per unit:

- fully user-assignable and alarm relays

Rating

Voltage	250 V AC	30 V DC
Current	5 A AC	5 A DC
Loading (non-inductive)	1250 VA	150 W

Connectivity/Communications

Ethernet connection

Web server with ftp: for real time monitoring, configuration, data file access and email capability

Bus communications

Profibus DP V1 (optional)

Data Handling, Storage and Display

Security

Multi level security: user, configuration, calibration and maintenance pages

Storage

Removable Secure Digital (SD) card – maximum size 2 GB

Trend analysis

Local and remote

Data transfer

SD card or FTP

Approvals, Certification and Safety

Safety Approval

cULus

CE Mark

Covers EMC & LV Directives (EN 61010)

General Safety

EN 61010-1

Overvoltage Class 11 on inputs and outputs

Pollution category 2

EMC


Emissions & immunity

Meets requirements of IEC61326 for an Industrial Environment


Overall Dimensions

Dimensions in mm (in.)


Note. Clearance – both enclosure doors open >180°. Allow sufficient clearance if mounting in a confined area – min. 270 mm (10.6 in.) on door hinge side and 100 mm (3.9 in.) on door opening side for cables.

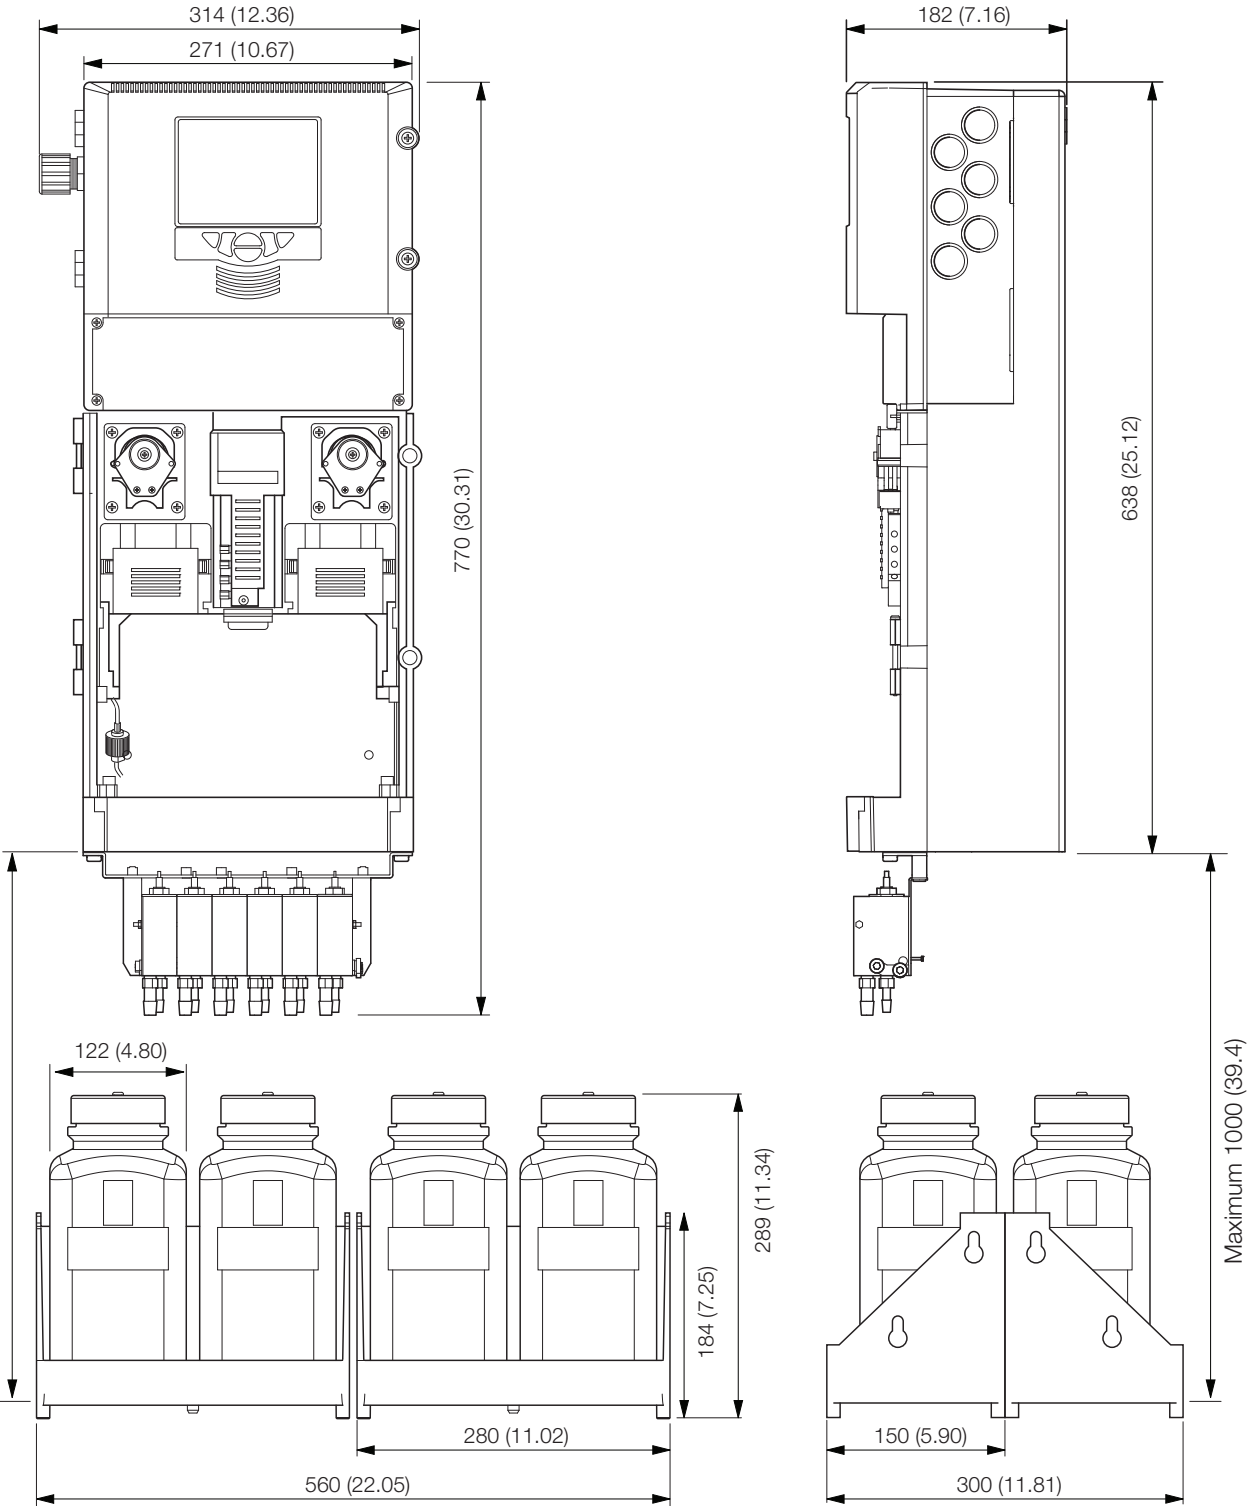


Dimensions in mm (in) unless stated

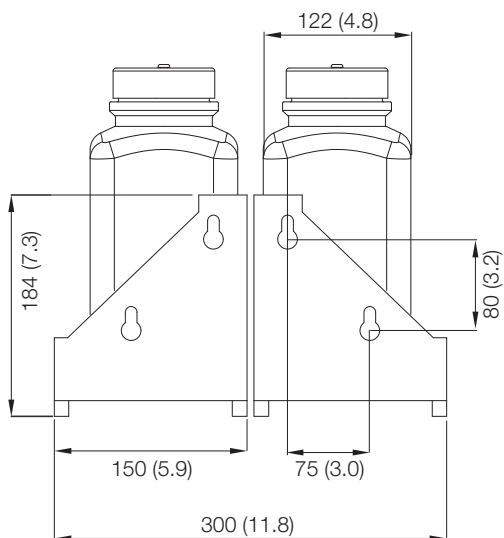

Example: two brackets mounted back-to-back with end plates attached to wall

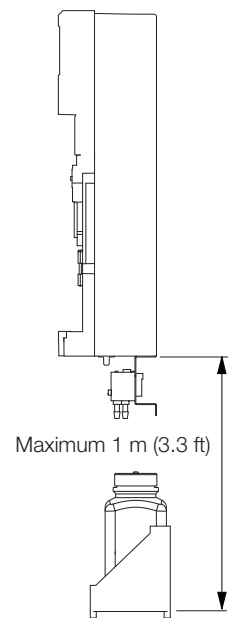

Maximum distance:
analyzer to
bottom of reagent tray

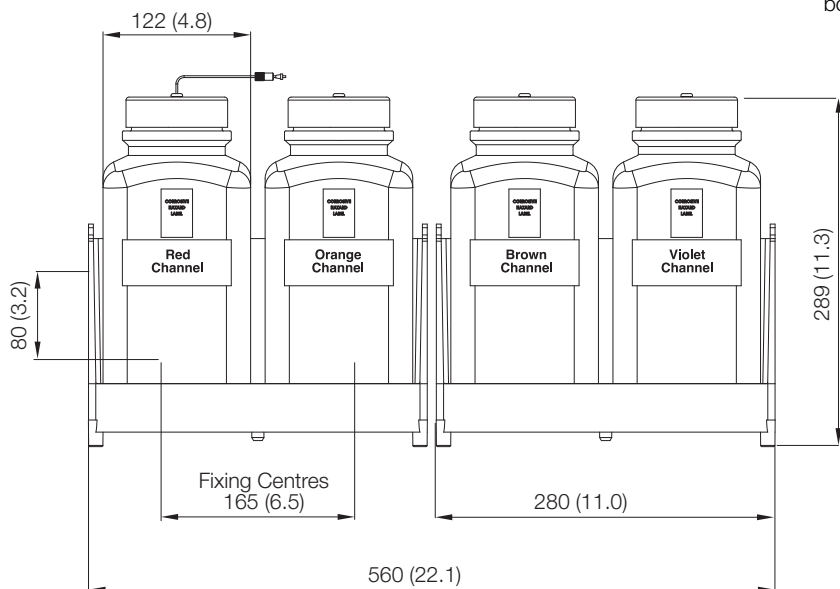

Example: two brackets mounted side-by-side with back plates attached to wall

Reagent bottles mounted on optional brackets (two bottles per bracket)

Benefits summary

- **Lowest cost-of-ownership**
 - up to 90 % lower reagent consumption than competitors' analyzers
 - labour-saving 5 minute annual maintenance and up to 6 months unattended operation
- **Easy to use**
 - familiar Windows™ menu system
 - built-in context-sensitive help
- **Full communications**
 - web- and ftp-enabled for easy data file access, remote viewing and configuration
 - optional Profibus DP V1.0
- **Fast, Accurate and Reliable**
 - temperature-controlled reaction and measurement section for optimum response
 - automatic cleaning, calibration and zero deliver high accuracy measurements
 - extensive electronics, measurement and maintenance diagnostics ensure high availability
- **Field upgradeable**
 - from 2 to 4; 2 to 6 or 4 to 6 streams, each user-programmable from 0 to 5000 ppb
- **Compact size**
 - 638 mm (25.1 in.) H x 271 mm (10.7 in.) W x 182 mm (7.2 in.) D
- **Email facility**
 - automatically email up to 6 recipients when user-selected events occur
- **Grab sample facility**
 - for manual sampling
- **Multiple outputs and relays**
 - 6 current outputs, 4 device state and 6 user-programmable relays as standard
- **Archiving facility**
 - SD data card for easy backup and programming
- **Auto-zero facility**
 - true auto-zero compensates for sample color, turbidity and background silica in reagents
- **Instrument logs**
 - alarm and audit logs for complete, secure records

Acknowledgements and Trademarks

Windows™, Microsoft™, MS-DOS™ and Internet Explorer™ are registered trademarks of Microsoft Corporation in the United States and / or other countries.
PROFIBUS™ is a registered trademark of PROFIBUS corporation.

Contactos/Contacts:

Comercial/Commercial:

Fernando Mena Costa
e-mail: fcosta@bhb.pt
Tel: (+351) 21 843 64 00
Fax: (+351) 21 843 64 09

Assistência/Service:

Patricia Costa
e-mail: ppcosta@bhb.pt
Tel: (+351) 21 843 64 00



Note:

ABB the owner of this document, reserves the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

Copyright© 2011

ABB. All rights reserved

Tel: (+351) 21 843 64 00
Fax: (+351) 21 843 64 09
geral@bhb.pt www.bhb.pt